# 3 Enjoy

## Start playback

1. Press **OPEN/CLOSE** ⏏ on the front of the recorder, load in a disc and close the disc tray.
2. Press **DISC MENU** (MENU) and use **up** (CH+) or **down** (CH-) keys to select a title.
3. Press **PLAY** ▶ to start playback.
4. To stop playback, press **STOP** ■.

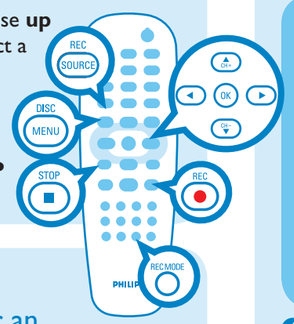


## Start Recording

### Recording from the TV or an external device

1. Insert a recordable DVD disc in the tray.
2. Press **REC SOURCE** ○ repeatedly to select the source to record from. (eg, TUNER, CAM1, DV, EXT1 or EXT2).
   - **To record a TV programme**, use **up** (CH+) or **down** (CH-) keys to scroll through the channels, or use the **0** (0) **-9** (9) keys to select the channel that you want to record.

### Recording from the TV or an external device (continued)

3. Press **REC MODE** ○ repeatedly to select the record mode.

| Record Quality | Hours of Recording that can be stored |
|---|---|
| | 4.7 GB DVD±R/±RW disc |
| **High Quality** HQ | 1 |
| **Standard Play** SP | 2 |
| **Extended Play** EP | 4 |
| **Super Long Play** SLP | 6 |

**Types of discs for recording**

DVD+RW DVD+R

DVD-RW DVD-R

4. Press **REC** ● to start recording, press **REC** ● again to automatically record 30 minutes.
5. To end recording, press **STOP** ■. 'UPDATE' will be displayed on the recorder.
6. To playback the recording, press **DISC MENU** (MENU), select the title and press **PLAY** ▶.

## Need help?

### User Manual
See the user manual that came with your Philips recorder.

### Online
Go to www.philips.com/support.

Be responsible
Respect copyrights

2006 © Koninklijke Philips N.V.
All rights reserved.

12 NC 3139 245 20971
www.philips.com



# Quick Start Guide

1 Connect
2 Set up
3 Enjoy

## What's in the box?




DVD Player/ Recorder

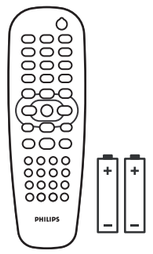


Remote Control and 2 batteries

RF Coaxial Cable

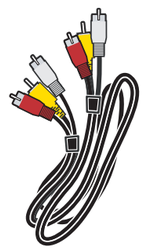

Audio/Video Cable

User Manual

PHILIPS

# 1 Connect

Start with the 'Basic Connection.'
If you have a VCR, follow the instructions for 'Connection with a VCR or similar device'.

## Basic Connection

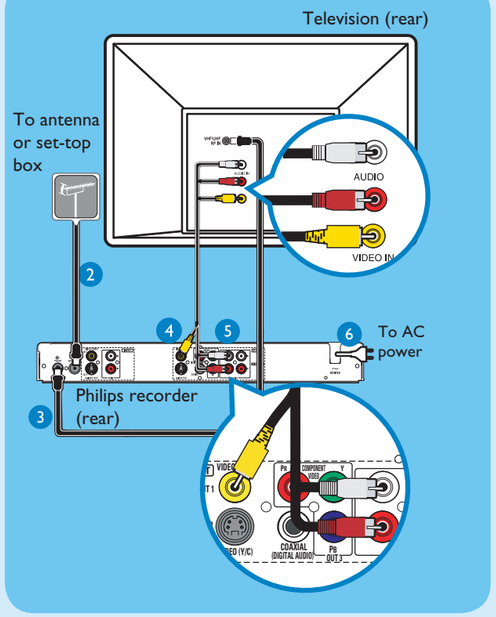


1. Before connecting, unplug the antenna cable that is currently connected to your TV.
2. Connect the antenna cable to the **ANTENNA-IN** jack on the recorder.
3. Use the supplied RF coaxial cable to connect the **TV-OUT** jack on this recorder to the Antenna In jack on the TV.
4. Use the supplied audio/video cable (yellow plug) to connect the **VIDEO (CVBS) OUTPUT** jack on this recorder to the VIDEO IN jack on the TV.
5. Use the supplied audio/video cable (red/ white plugs) to connect the **AUDIO OUTPUT** jacks on this recorder to the AUDIO IN jacks on the TV.
6. Connect the power cable from the recorder to an AC power outlet.

## Connection with a VCR or similar device

### A Before Connecting

Your new Philips recorder replaces the VCR for your recording needs. First, unplug all the connections from your VCR.

### B Connecting

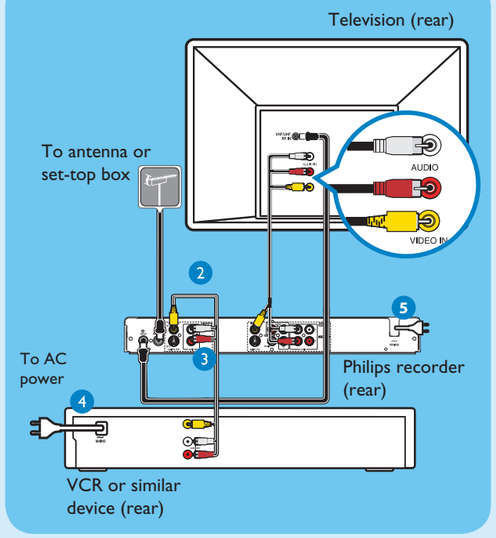


1. Follow steps 1 to 5 of 'Connecting' under 'Basic Connections' to connect the recorder before you proceed to step 2 below.
2. Use a yellow video cable (not supplied) to connect the **VIDEO (CVBS) EXT 1** jack on this recorder to the yellow VIDEO OUT jack on the VCR.
3. Use another red and white audio cable (not supplied) to connect the **AUDIO INPUT** jacks on this recorder to the red and white AUDIO OUT jacks on the VCR.
4. Connect the power cable from your VCR to an AC power outlet.
5. Connect the power cable from the recorder to an AC power outlet.

**Note** In this setup, the VCR cannot record TV programs.

**For additional connection diagrams, see the accompanying User Manual.**

# 2 Set up

### A Finding the viewing channel

1. Press **STANDBY-ON** on the recorder.
2. Switch on the TV set.

**Note** If connected to your VCR, make sure it is switched off or in standby mode before proceeding.

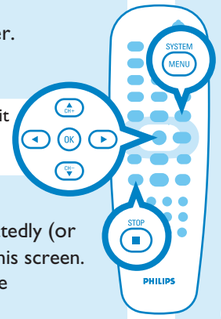


3. Press "0" and then the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, button) until you see this screen. This is the correct viewing channel for the recorder.

### B Initial Installation

1. Press **SYSTEM MENU** on the remote control.

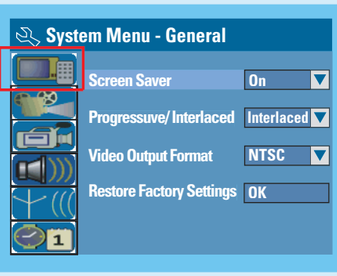


**Note** Use **up** or **down** keys to toggle through the options. Select an item by pressing **right**. To confirm a setting, press **OK**.

2. Select the OSD language.
   - Highlight and press **right**.
     Select { **On-Screen Display Language** } and press **right** to access the options. Press **OK** to confirm your selection.
3. Setup and install TV channels.
   - Highlight and press **right**.
     Select { **Tuner Input Source** } and press **OK**.
     { **Cable** } – if the recorder is connected directly to the cable signal or through a set-top box.
     { **Air** } – if the recorder is connected directly to an indoor or outdoor antenna.

   **Note** Press **OK** to confirm your selection.
   - Select { **Channel Search** } and press **OK** on the remote control to start automatic TV channel search.
4. Select the language.
   - Highlight and press **right**.
     – selects TV On-Screen Display language.
     – selects default Disc Menu language.
     – selects default subtitle language.
     – selects default audio language.
5. Select the date and time.
   - Highlight and press **right**.
     Use the **numeric keypad 0 -9** to input the date/time, then press **OK** to confirm.
6. Press **SYSTEM MENU** to exit.